



●たて断面図
[床先貼 埋込敷居(アルミ)使用時]

10.5 105

10.5 105

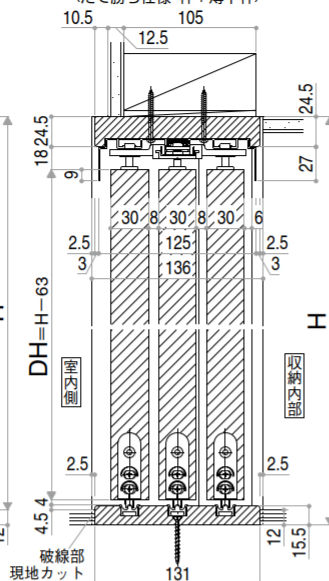


・薄敷居(シート)※取付位置:柱芯基準
四方枠 [床先貼]
(たて勝ち仕様 枠+薄下枠)

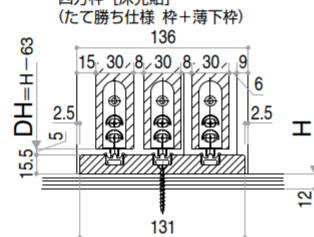


●たて断面図

A horizontal number line with arrows at both ends. There are tick marks at 0, 11, and 130. A bracket is drawn below the line, starting at the tick mark for 11 and ending at the tick mark for 130. The number 119 is written below the bracket.


11	130
----	-----

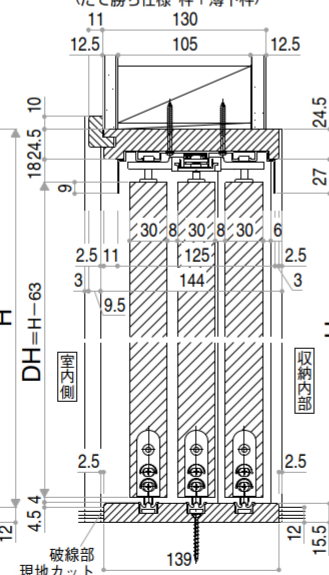

・薄敷居(シート)※取付位置:柱芯基準
四方枠 [床先貼]
(たて勝ち仕様 枠+薄下枠)

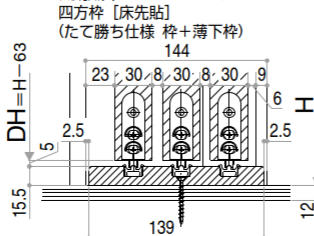

●横断面図

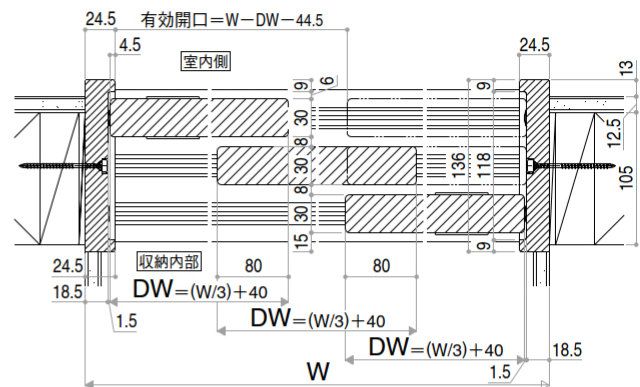

●横断面図

